



Integrating EasyCODE into Tasking EDE and CrossView Debugger

Requirements:

EasyCODE V7.1.0.3 or higher and TASKING's CrossView Debugger from Version 6.0 on must be installed.

Supported Targets: C166 and ST10 Family

Configuration:

1. Run the Tasking EDE. To activate the EasyCODE support in the EDE you just have to check the option „EasyCODE Support“ from the EDE menu.
Menu item: „EDE\CrossView Pro Options\Miscellaneous“

There is no other action required. EasyCODE can be used to replace the integrated editor.

2. Running the CrossView Debugger directly is also a supported option. Set the argument `-easycode` to run EasyCODE, load the file and use the debug options in EasyCODE.
3. Both options allow debugging directly on the structured chart, using the Tasking debug menu. Available messages appear in EasyCODEs Output window.

Please contact the EasyCODE Supportteam for any further questions on EasyCODE or this integration. For any questions regarding the Tasking EDE or debugger, please contact Tasking. .

Contact:

EASYCODE GmbH

Loewenberger Straße 50
D-90475 Nürnberg

Tel: 0049-911-99 840-60
Fax: 0049-911-99 840-97
e-mail: info@easycode.de
support@easycode.de